


## Latest Track Tweaks—Stiffen centre section, Spring pans

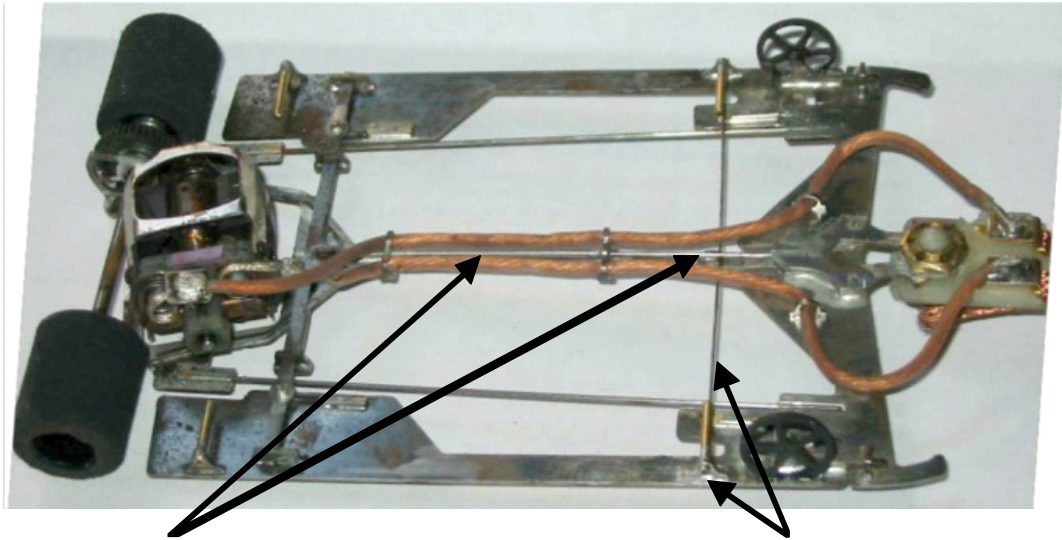

New versions of this chassis now feature a 0.047 centre rail, solder this at the back and also to the two lead wire retainers and the rear of the guide plate. It is also advised to use stainless steel pin tube in the pin mounts.

Cut slots in the underside of both front pin tube mounts so you can slide a piece of 0.015" piano wire under the centre section wire and into the mounts above the pan and below the pin tube. Solder wire to pin tube mounts & tag wire to centre section to "spring pans" lightly in forward position.